

FOR EXHIBITORS WITH COLUMNS LOCATED WITHIN THEIR CONTRACTED BOOTH SPACE

Every column has a fire strobe on each of its 4 sides, located APPROXIMATELY 11'6" up. Strobes are 6.5" high, 5" wide and 1.16" deep. **Strobes must remain visible at all times.** An 8' buffer is required between the strobes and any booth structures or hanging signs that may obstruct its view.

Many columns have a fire hose cabinet and/or fire extinguisher cabinets. Both must remain accessible at all times. If you are planning a covering for a column you must provide access to the fire equipment. Access can either be a hard structure that has a door with a minimum clearance of 3ft radius for an individual to walk around the column or drape that is no closer than 1ft to the column. All wraps must be made of flame retardant material. If the fire hose or fire extinguisher is not visible, you must have signage indicating that a fire extinguisher is located behind the covering you have placed.

Electrical feeds are labeled "100 amp feeds" on the column detail drawings attached. Like the fire extinguishers, they can be covered but need to be accessible. No Signage is needed indicating the location of the feed.

Electrical feed box sizes: 100 amp distribution panel 13"d x 13"w x 4"h

400amp distribution panel 13"d x 18"w x 4.5"h

NOTE: The portion of the column above the fire equipment base is treated with a spray-on fire coating which tends to flake when hanging signs/banners. Additional cleaning services may be recommended.

Need to know what type of column you have within your

booth space?

Contact Frank Misceo frank.misceo@ubm.com for a detailed booth diagram of the column within your space.

Need help wrapping a column?

GES is available for hire to professionally wrap and utilize your column's vertical space as a promotion tool. Contact GES at (702) 515-5970 or <u>www.GES.com/chat</u>

